



Licence Key Management

Readme

Eli-v6.4.84

Bridgeworks

Unit 1, Aero Centre, Ampress Lane,
Ampress Park, Lymington,
Hampshire SO41 8QF
Tel: +44 (0) 1590 615 444
Email: support@4bridgeworks.com

Licence Key Management

This page allows you to view, upload, download or remove licence keys installed on the Node. Licence keys are required to enable features on installed feature cards.

From the Home screen, select the *Licence Key Management* icon from the *Node Maintenance* section.



The following page will be displayed:

Licence Keys

Node Menu

- Home
- Reboot
- Logout
- Support
- Help

Installed Licence Keys

ID	Feature Type	Limit	Expires
315953172	Fibre Channel	1	Expired
777490233	Fibre Channel	1	5 Days
2018560049	WAN	8	N/A
	iSCSI	8	
	SAS	8	
2125412457	Fibre Channel	8	N/A

Some of your licence keys have expired. Functionality may be missing from your node as a result. Please remove the expired licence keys.

[Remove](#) [Download](#)

Licence Key Upload

Licence Key File:

[Choose file](#) No file chosen

[Upload](#)

The *Installed Licence Keys* table displays the installed licence keys with the following information:


Feature Type The feature that the licence key enables.

Limit The number of interfaces that the feature may be mapped to.

Expires The amount of time left until a temporary licence key expires. If *N/A* is in this column, it

indicates the licence key is not temporary.

When a temporary licence key has expired, there will be a warning on the page and the *Expires* field will say *Expired* as shown in the image above. At the point of expiration, an event will be displayed below the *Node Menu* similar to the one shown below.

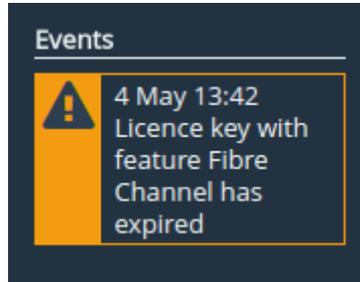


Uploading a Licence Key

To upload a licence key:


1. Click the *Choose file* button in the *Licence Key Upload* section.
2. Locate and select the licence key to upload.
3. Click the *Upload* button.

After the upload completes, a valid licence key will appear in the *Installed Licence Keys* table.

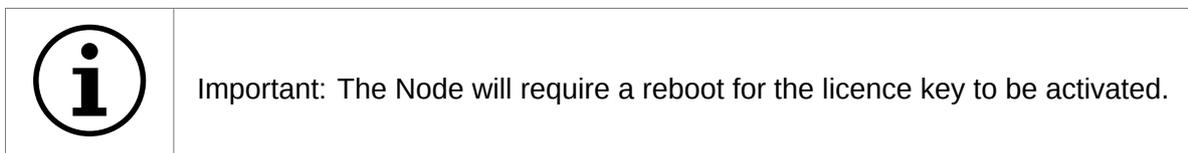

Removing a Licence Key

To remove a licence key, select the licence key from the *Installed Licence Keys* table, then click the *Remove* button. This will open a dialog box, as shown below.

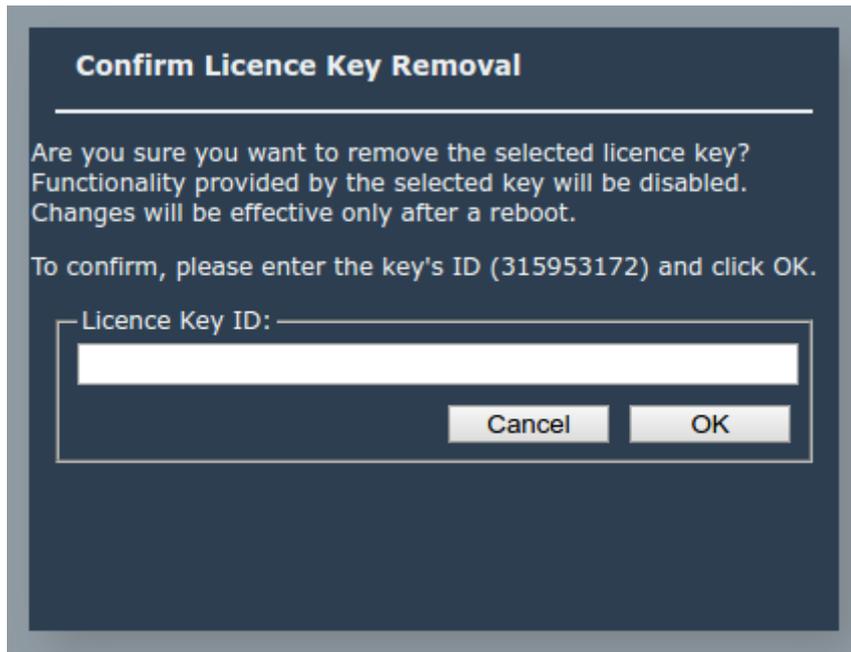

Copy the licence key ID into the *Licence Key ID* field and click *OK*. The licence key will be removed from the Node and will no longer be displayed in the *Installed Licence Keys* table.

Downloading a Licence Key

To download a licence key, select the licence key from the *Installed Licence Keys* table, and click *Download*.

A Useful Links

Frequently Asked Questions If you experience problems with the Node, the frequently asked questions page may be able to help: <https://support.4bridgeworks.com/documents/faqs/>

Bridgeworks Support If you continue to experience problems with the Node, please contact support at <https://support.4bridgeworks.com/contact/>.

Bridgeworks Support Videos These videos will guide you through some of the instructions found in this manual. <https://www.youtube.com/user/SANSlide/>.

Product Manuals The latest product manuals can be found at <https://support.4bridgeworks.com/documents/manuals/>.